

Chapter 9 Maintenance



Warning

Disconnect power before performing maintenance. Although dangerous voltage levels are not exposed, disconnecting power will ensure no electric shock hazard is present.

GENERAL

The unit contains no internal electronic components that can be serviced or replaced by the user. Repairs should not be attempted by the user.

FUSE

If a fuse fails, replace it with one of equal rating. Repeated failure indicates a more serious problem. If this happens, refer to the section on maintenance.

MAINTENANCE

The unit provides maintenance free service. Periodically, it is necessary to remove dust that has collected on internal components. Remove dust with a soft bristle brush and low pressure air or vacuum.

Before attempting diagnostic tests, check that all connectors and plugs are firmly inserted. The test procedures will identify the faulty component in a bad communications link.

If the unit appears faulty, contact Motorola for service and assistance. Do not return the unit without prior instructions.

