

**Chapter 1 Introduction**

GENERAL .....	1-1
PHYSICAL DESCRIPTION .....	1-1
FUNCTIONAL .....	1-1
FEATURES .....	1-3
COMPATIBILITY .....	1-3
COMPLIANCE .....	1-3

**Chapter 2 Installation**

RECEIPT INSPECTION .....	2-1
SITE PREPARATION .....	2-1
HARD OPTIONS .....	2-1
INSTALLATION .....	2-1

**Chapter 3 Operation**

GENERAL .....	3-1
DATA TERMINAL EQUIPMENT (DTE) .....	3-1
DTE INTERFACE CONNECTORS .....	3-1
Request to Send .....	3-3
Clear to Send .....	3-3
Transmitter Clock .....	3-4
Transmit Data .....	3-4
External Clock .....	3-4
Received Line Signal Detector .....	3-4
Receive Clock .....	3-5
Receive Data .....	3-5
Data Set Ready .....	3-5
No Signal .....	3-5
GROUNDING .....	3-5
Protective Ground .....	3-5
Signal Ground .....	3-5
DTE INITIATED TEST SIGNALS .....	3-6
Local Line Loopback .....	3-6
Remote Terminal Loopback.....	3-6
Remote Loopback.....	3-6
Test Pattern.....	3-6

Test Mode .....	3-6
DDS SYSTEM INTERFACE .....	3-7
SEALING CURRENT .....	3-7
FRONT PANEL INDICATORS .....	3-8
Pushbuttons .....	3-8
LCD .....	3-9
LED's .....	3-9
Power Switch .....	3-9
<b>Chapter 4 Configuration</b>	
GENERAL .....	4-1
CONFIGURATION ON POWER-UP .....	4-1
CONFIGURATION OPTION DESCRIPTIONS .....	4-2
Timing .....	4-2
Rate .....	4-2
Synchronous/Asynchronous .....	4-2
Bits Per Word.....	4-2
RTS Control.....	4-3
Buffer.....	4-3
Loopback .....	4-3
DSR .....	4-3
System Status.....	4-4
Circuit Assurance .....	4-4
RTS/CTS Delay .....	4-4
64 k Scrambler .....	4-4
OPTION SELECTION .....	4-5
Front Panel Option Selection .....	4-5
Front Panel Initiated Tests .....	4-6
Configuration Option Menu .....	4-6
STRAP/SWITCH CONFIGURATION .....	4-11
Cover Removal .....	4-12
Replacing the Cover .....	4-12
Front Panel Option .....	4-14
Chassis Signal Ground .....	4-14
DTE Interface .....	4-15
<b>Chapter 5 Diagnostics</b>	
TEST FEATURES .....	5-1

Remote Terminal Loopback .....	5-1
Local Line Loopback .....	5-1
Local Line Loopback with Test Pattern .....	5-3
Remote Loopback .....	5-3
Remote Loopback with Test Pattern .....	5-5
Test Pattern.....	5-6
 <b>Chapter 6 Troubleshooting</b>	
GENERAL .....	6-1
NS LED ON .....	6-1
OS LED ON .....	6-1
TM LED ON .....	6-1
TM LED FLASHING .....	6-1
SELF TEST.....	6-2
END-TO-END TEST .....	6-2
LOCAL LOOPBACK TEST .....	6-2
REMOTE LOOPBACK TEST .....	6-2
REMOTE LOOPBACK WITH TEST PATTERN .....	6-3
 <b>Chapter 7 Non-DDS Applications</b>	
GENERAL .....	7-1
INSTALLATION .....	7-1
TIMING .....	7-2
OPTIONS .....	7-3
TESTS .....	7-3
 <b>Chapter 8 Rate Adapter Option</b>	
GENERAL .....	8-1
FRONT PANEL DISPLAY .....	8-1
Operating Distance .....	8-1
RATE ADAPTER CONFIGURATION OPTIONS .....	8-2
Timing .....	8-2
Rate .....	8-2
 <b>Chapter 9 Maintenance</b>	
GENERAL .....	9-1
FUSE .....	9-1
MAINTENANCE .....	9-1

**Appendix A Specifications**